



Small Door



Walk-In



Vault Style



Side Opening



Mopec Refrigeration Systems
Intelligently Designed From The Inside Out

CADAVER LOCKER

Each locker can hold up to five cadavers. The cadaver locker is manufactured in pediatric, standard and bariatric sizes. The single door modular system is compatible with Mopec rack systems, as well as telescoping or conveyor tray style storage. Locking door handles for added security are optional.

About Mopec



Mopec is committed to designing and manufacturing equipment and accessories to enhance your facility's safety, flexibility and productivity. Our technical prowess stems from a commitment to quality craftsmanship and high-touch service. Mopec is recognized globally for giving clients an unrivaled experience including design, manufacturing, installation and post-sales support. The industries we serve include anatomical pathology, anatomy labs, medical examiner/morgue and necropsy.



INDUSTRIES WE SERVE



Anatomic Pathology



Anatomy Labs



Medical Examiner/Morgue



Necropsy

VISIT WWW.MOPEC.COM FOR MORE INFORMATION

21750 Coolidge Highway • Oak Park, MI 48237 USA
Phone: +1 800-362-8491 • Email: info@mopec.com

Equipment shown may include optional features. Please visit our website for more information.
Copyright ©Mopec 2016.



Mortuary Refrigeration



Intelligently Designed From The Inside Out

ANATOMICAL PATHOLOGY | ANATOMY LABS | MEDICAL EXAMINER/MORGUE | NECROPSY

Mortuary Refrigeration Technology

Mopec's portfolio of refrigeration solutions range from small door modular systems to walk-in rooms. A wide variety of compatible accessories are available to optimize safety and workflow.


ADVANCED REFRIGERATION SYSTEM FEATURES

- **DESIGN SUPPORT**
Mopec offers "Project Specific Management," which provides our customers engineering support in design and layout. We assist customers with value engineering to maximize storage capacity without compromising safety.
- **QUALITY CONSTRUCTION**
Refrigeration units are built with quality materials such as stainless steel, urethane foam, and cam-lock fasteners - resulting in durable products that last for many years.
- **ANTIBACTERIAL COATING**
Sanisteel® coating provides antibacterial properties that offer the highest level of hygiene; inhibiting the growth of germs and eliminating bacteria.
- **EFFICIENT OPERATION**
In an effort to conserve energy, lights automatically turn on and blowers shut off in select units when the door is opened.
- **SUPERIOR DOOR DESIGN**
Most doors include heated jambs and open to a 180° angle for ease of use. Magnetic seals ensure cadaver or specimen preservation. Walk-in units offer an internal safety release for employee safety.
- **INSTALLATION SUPPORT**
Experienced installation service is available for all mortuary refrigeration. Select units are available for fulfillment in as little as five days.



TELESCOPING TRAY

The most common type of refrigerator is one that contains a telescoping tray. This style is available in end opening, side opening and roll-in configurations. The telescoping tray is designed to support the cadaver and tray, even when fully extended; allowing the cadaver to be in full view from the refrigerator.

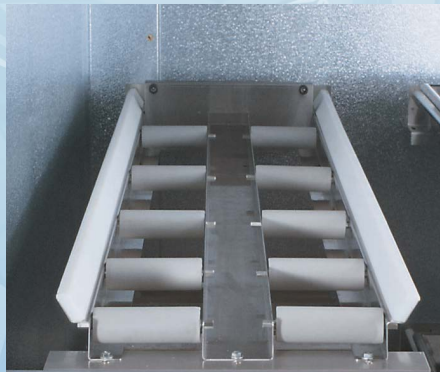

CONVEYOR TRAY

The conveyor tray is available in end opening and side opening configurations. In this model, the tray rolls in and out of the cooler using a conveyor roller mechanism. The roller mechanism is permanently mounted within the cooler. Only the tray is removable.



WALK-IN

The walk-in refrigerator/cooler system allows a larger volume of cadaver storage and is compatible with other Mopec equipment. Cadavers can be stored on individual carts, or a rack system can be constructed within the cooler for high volume storage.

OUR UNITS ARE DESIGNED WITH THESE SPECIAL FEATURES

SAFETY

Coolers are equipped to preserve specimens and cadavers

- Sanisteel® coating available
- Air management system
- Integrated temperature monitor and alarm

RELIABILITY

Durable materials and high quality manufacturing

- High-density flooring
- Environmentally sensitive non-HCFC foam insulation
- True "hard nose design"
- Heated door jamb
- Installation expertise to assure performance
- Optional redundant systems

VERSATILITY

Systems compatibility that delivers on your investment

- Self-contained refrigeration unit
- Temperature: -20° C (-4 F) for freezer
4° C (39.3 F) for refrigeration
- Capacity limit defined by user
- Combined high-low temperature alarm
- Chart recorder processes trend lines, can store up to seven days of cooler data
- Lead lag controller maintains temperature as regulated by the cold room switching between two independent systems
- Storage options: racks, telescoping conveyor lifts and trays
- Custom configuration available
- Freezer condensing units available
- Custom finishes available



AVAILABLE FOR QUICK SHIP

Mopec morgue refrigeration units can be sized to suit your facility needs, no matter the size. Small door end opening modular systems are compatible with either telescoping or conveyor tray storage and are available for shipment within five days.

Mopec Delivers More

END OPENING MODULAR SYSTEMS



KM201



KM202



KN203



KM301



KM302




KM303

Cyclopentane foamed panel
+15% improved thermal conductivity
+30% longer panel life



COMPATIBLE ACCESSORIES WITH MOPEC REFRIGERATION SYSTEMS

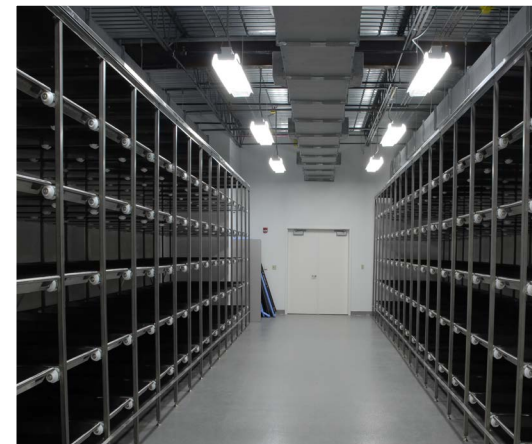

RACKS We offer cantilever, storage and mortuary racks with 3, 4 or 5 tiers.



TRANSPORT We offer body tray carriers, cadaver carriers and cadaver covers.



LIFTS We offer conveyor, pallet, low profile, hydraulic and overhead lifts.



TRAYS We offer body trays in assorted sizes.

For Details on Mopec Refrigeration Systems,
Call: 800.362.8491 or Visit us at:
www.mopec.com