

Mopec

Motorized Hydraulic Cadaver Carrier

Cadaver Carrier with Self Propulsion Steering
Easy to Start • Easy to Turn • Easy to Stop

Less Stress and Strain = A Better Outcome

Mopec's Motorized Cadaver Carrier provides a significant reduction in stress and strain with an innovative solution to patient transport that focuses on the technician's safety above anything else.

Control

Stopping is at your fingertips. A convenient hand brake helps you negotiate ramps and corners without using your body weight, resulting in safe and easy stops.

Variable Speed Control

Put's you in control of the speed of transport. Simply squeeze the activation grip and apply pressure to the motion sensing handles, then simply guide the stretcher in the direction you wish to travel. To stop, release the grip and the carrier will immediately stop safely and securely.


Elevation

Low height for safer stretcher ingress and egress. Elevates from 23-1/4" (58cm) to 34-1/2" (87.6cm)

Total-Lock

Total-Lock wheel locking and aligning mechanisms along with heavy-duty eight inch diameter casters make pushing and steering the JA800 easy.

- Dimensions 86" (218cm) L x 32" (81cm) W
- Power propelled with handle bars (on one end)
- Twin pedestal hydraulics for easy foot activated elevation
- Four (4) wheel lock brakes
- Accommodates up to 700 lbs
- Includes false frame and cover for concealed transport

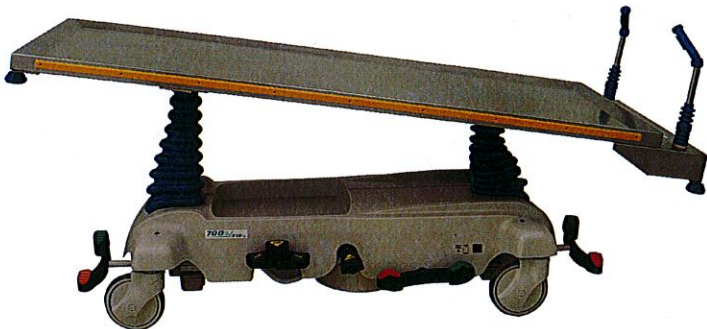

Easy elevation



Charged indicator



Activation grip



False Frame Included

Product No. JA800

Mopec.com

(800) 362-8491

+1 (248) 291-2040

Fax (248) 291-2050