

The Pharmacy Plus Series Built-in Dual Temperature Refrigerator/Freezers Combinations feature separate microprocessor temperature controllers allowing for precise temperature control, verification and recovery. Refrigerators feature an interior fan driven, forced-draft air circulation system provides excellent temperature uniformity and recovery after door openings. **For manual defrost units, periodic manual defrosting is required.**

Models are designed with a “front-breathing” ventilation system, eliminating the need for clearance around the top and sides of the unit; enabling the user to incorporate these units into cabinets and other applications where free space is limited.




PH-DAI-HC-RFC9G

PH-DAI-HC-RFC9



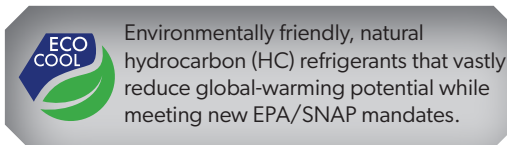


- Digital temperature display
- Audible and visual temperature alarms
- Resettable Min/Max
- °C/°F switchable



FEATURING

- Built-in, front breathing technology
- Microprocessor temperature controller, refrigerator and freezer
- Adjustable temperature range:
Refrigerator: 36°F to 46°F (2°C to -8°C)
Freezer: -4°F to -13°F (-15°C to -25°C)
- Defrost:
Refrigerator: Cycle
Freezer: Manual
- Remote alarm contacts, refrigerator and freezer
- Back wall evaporator cover (refrigerators only)
- Forced draft circulation (refrigerators only)
- Keyed door lock
- Magnetic door gasket for positive seal
- Leveling legs
- Independent mechanical refrigeration systems with separate compressors
- Two probe access ports, refrigerator and freezer
- Temperature Monitor Device - complies with the current CDC guidelines, 3 years certification of calibration, “buffered” probe in the product simulated solution, min/max memory, °F/°C switchable, field installable, and visual & audible temperature alarms
- Vaccine storage power cord warning label
- Pharmacy refrigerator/freezer toolkit with temperature logs
- Pyxis®, Omnicell® and AcuDose RX® compatible
- UL/C-UL listed
- Two year parts and labor warranty, plus an additional three year compressor parts warranty

Combination Model	Ft ³ (Ref/Frz)	Set Point (Ref/Frz)	Defrost (Ref/Frz)	Doors (Ref/Frz)	Shelves (Ref/Frz)	Width"	Depth"	Height"
 PH-DAI-HC-RFC9SS*	4.5/4.2	41°F/-4°F	Cycle/Manual	2 Solid Stainless	2 Adj., 1 Fixed/2 Fixed	23 ¾	24 ½	66 ¾
 PH-DAI-HC-RFC9*	4.6/4.2	41°F/-4°F	Cycle/Manual	2 Solid	2 Adj., 1 Fixed/2 Fixed	23 ¾	24 ½	66 ¾
 PH-DAI-HC-RFC9G*	4.6/4.2	41°F/-4°F	Cycle/Manual	Glass/Solid	2 Adj., 1 Fixed/2 Fixed	23 ¾	25 ½	66 ¾

Specifications are subject to change
*Left hinge model available